

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 10/16/2019

PAGE 1 OF 5

ITEM: 205321T (B1&B2)





ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

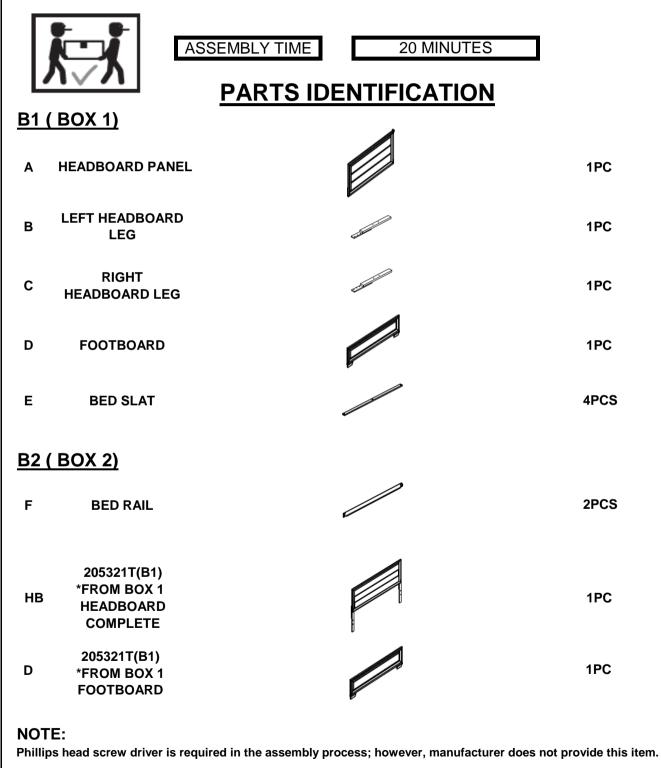

PAGE 2 OF 5

ITEM:205321T (B1&B2)





ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 205321T(B1)

1	LONG BOLT (M8 x 40mm - BLK)		6PCS
2	LOCK WASHER (M8 - BLK)	\bigcirc	6PCS
3	FLAT WASHER (M8 x 18mm - BLK)	\bigcirc	14PCS
4	SHORT BOLT (M8 x 20mm - BLK)		8PCS
5	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
6	PAN HEAD SCREW (M4 x 32mm - BLK)	E Dana and a second	8PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 3 OF 5

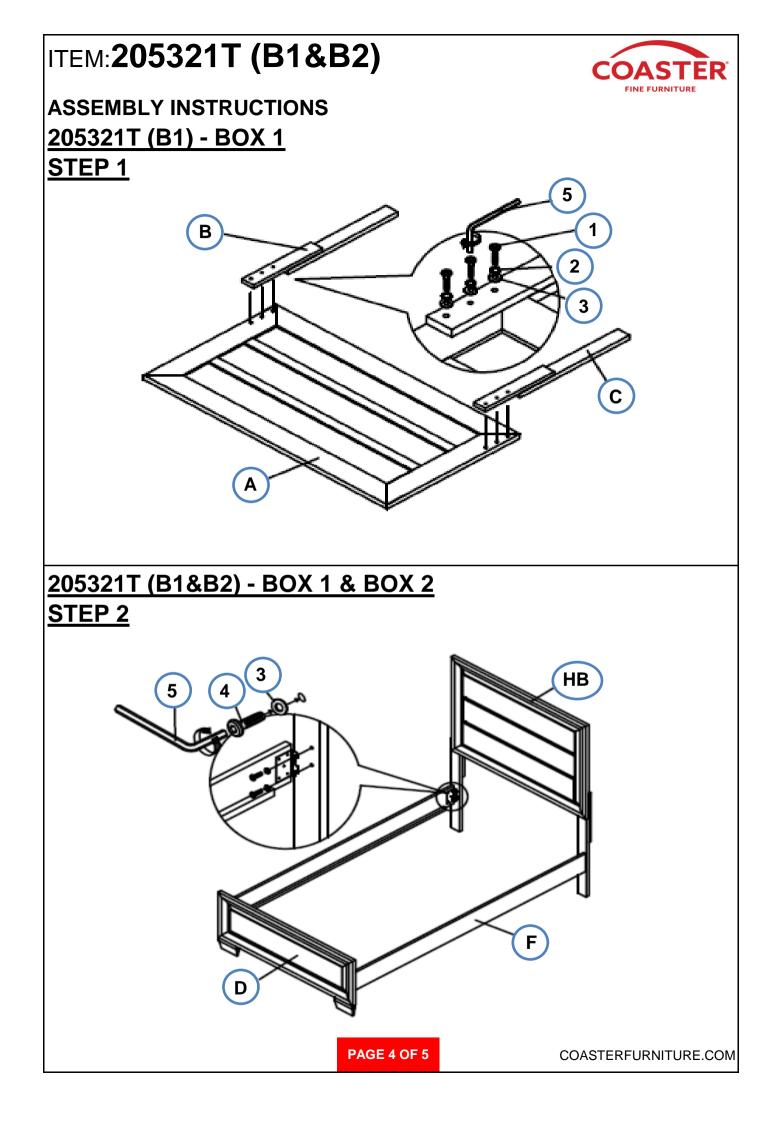


ITEM: 205321T (B1&B2)



ASSEMBLY INSTRUCTIONS

<u>STEP 3</u>

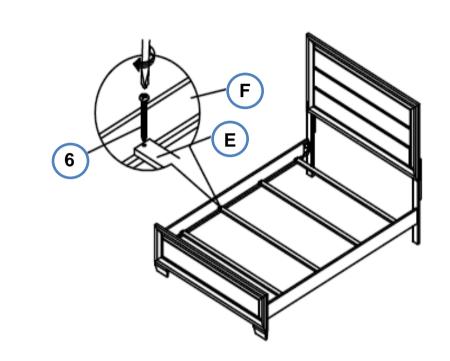

STEP 4 COMPLETE





