


MODEL

CM-AC6980

Questions?

GIVE US A CALL: 1-888-980-5122 MON – FRI 8:30AM – 5:30PM (PST)

TOOLS REQUIRED

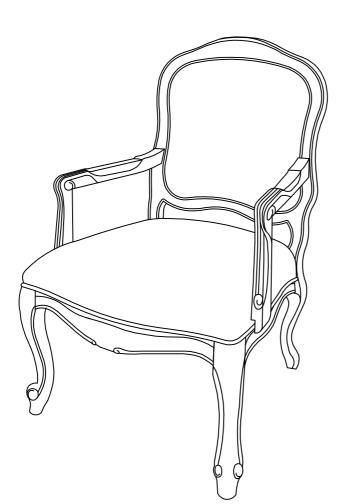



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)



2 - People Recommended

ASSEMBLY RATING



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 22-03-15





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com



Monday to Friday 8:30AM- 5:30PM (PT)



E-MAIL cs.ec@foagroup.com











FurnitureOfAmerica



	Are you missing anything? Double-check all parts, hardware and accessories listed are all acccounted for.	Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
	Should we send any replacements?	Prep Time!
	Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

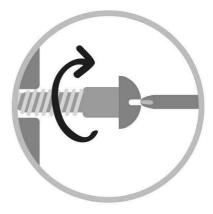

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CHAIR

CM-AC6980



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

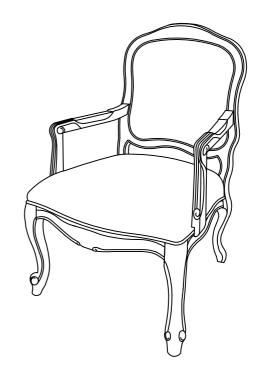

PARTS

























Backrest W/Legs

Cushion

Seat Frame

Left Accent

Right Accent

Front Leg

HARDWARE











Flat Washer 5/16"

Bolt 5/16"X2-1/2"

Bolt 5/16"X1-3/4"

Allen Wrench M5

#F) 4pcs



Lock Washer 5/16"















Flat Washer 1/4"

Lock Washer 1/4"

Bolt 1/4"X1-1/2"

Bolt 1/4"X 2"

Allen Wrench M4

(#K) 5pcs








Screw


Plug

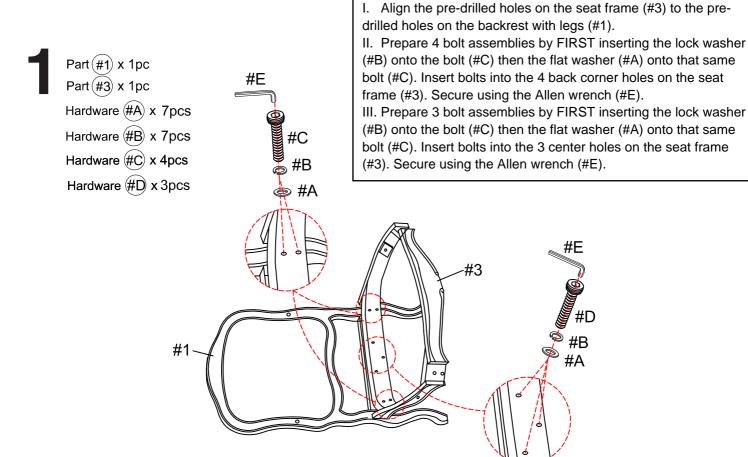

2


Part (#6) x 2pcs

I. Align the front legs (#6) to the pre-drilled holes located on the front corners of the seat frame (#3). II. Prepare 4 bolt assemblies by FIRST inserting the lock washer (#B) onto the bolt (#C) then the flat washer (#A) onto that SAME bolt (#C). Secure bolts using the Allen wrench (#E).

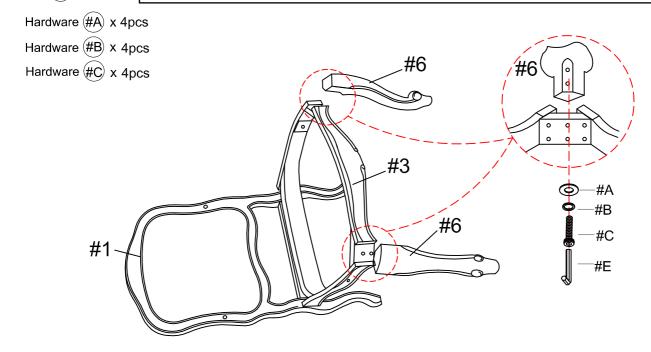

Apply cushion (#2) onto the seat frame (#3).

3 Part (#2) x 1pc

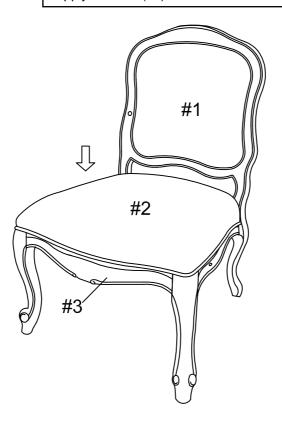

4

- I. Align the left and right accents (#4,5) to the pre-drilled holes on the backrest with legs (#1) and the seat frame (#3).
- II. Prepare 2 bolt assemblies by FIRST inserting the lock washer (#G) onto the bolt (#H) then the flat washer (#F) onto that SAME bolt (#H). Insert into the backrest with legs (#1) connecting to the accents (#4,5). Secure using the Allen wrench (#J).
- III. Prepare 4 bolt assemblies by FIRST inserting the lock washer (#G) onto the bolt (#I) then the flat washer (#F) onto that SAME bolt (#I). Insert into the seat frame (#3) connecting to the accents (#4,5). Secure using the Allen wrench (#J).

Part (#4) x 1pc

Part (#5) x 1pc

Hardware #F x 4pcs

Hardware #G x 4pcs

Hardware (#I) x 2pcs

Hardware (#L) x 2pcs

#4 #1 #5 #5


Note: Left and right is determined by facing the front of the chair in its upright position.

#1

5


Hardware (#K) x 5pcs

Insert 5 screws (#K) into the bottom of the cushion (#2) to secure with the seat frame (#3). Use the Phillips screwdriver to secure.

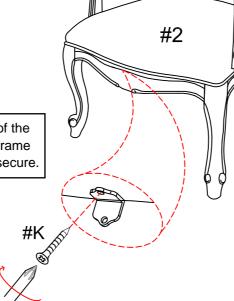

6

Carefully turn the completed chair upright. Make sure the chair is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.

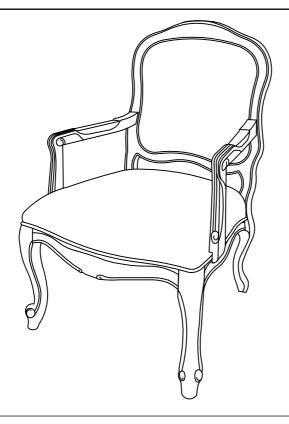

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.