

## ASSEMBLY INSTRUCTIONS

### MODEL # CM3194PC-2PK

#### **Questions?**

GIVE US CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PST)

#### **TOOLS REQUIRED**






2 - People Recommended



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

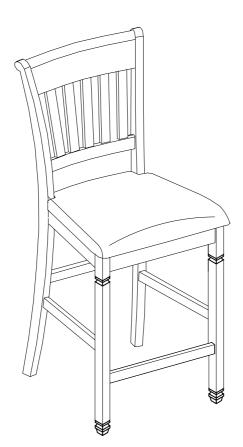






Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

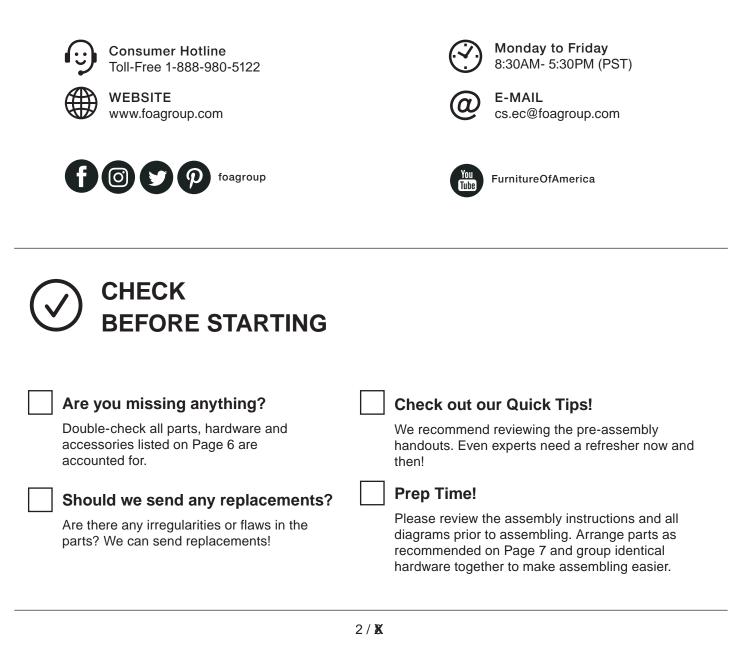

# PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





 












#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

#### **Suitable Location**

Assembling near the area of the intended location is highly recommended.

#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.

#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

## **ASSEMBLY** AND **CARE ADVICE**




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY **RESULT IN INJURY AND/OR PROPERTY DAMAGE.** 




Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools

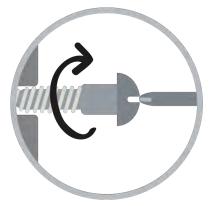

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

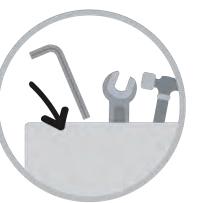

or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

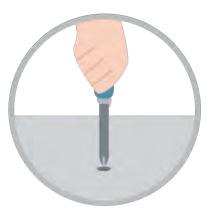

Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

## PUB CHAIR CM3194PC-2PK




 Please keep instructions for future reference.

 Check the quantity and irregularity of parts and hardware before you start.




PARTS			
#1)1pc x2	#21pc x2		#3)2pcs x2
Chair Back	Cushion Frame		Front Leg (L&R)
#4)1pc x2	#5 2pcs x2		
Front Stretcher	Side Stretcher (L&R)		
HARDWARE			
#A4pcs x2 ##########@ Bolt Ø1/4" x 3-1/8"	#B 4pcs x2	#© 2pcs x2 #© 2pcs x2 #######@ Bolt Ø1/4" x 1-1/2"	#D 10pcs x2
#E 10pcs x2	#F1pc x2	#G 6pcs x2 () Screw Ø8 x 1-1/2"	Ø1/4"x13mm

## Exploded View

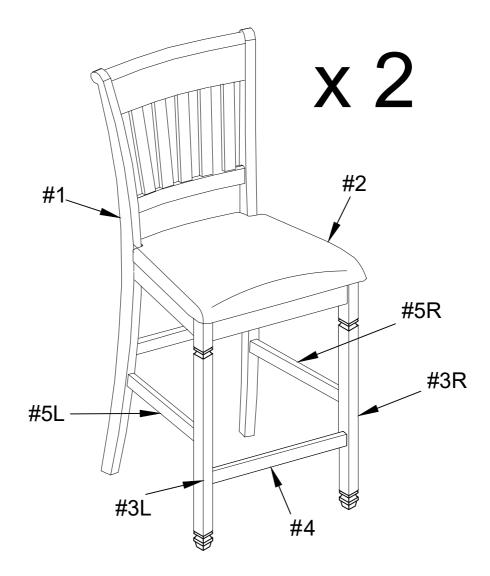

## ASSEMBLY INSTRUCTIONS

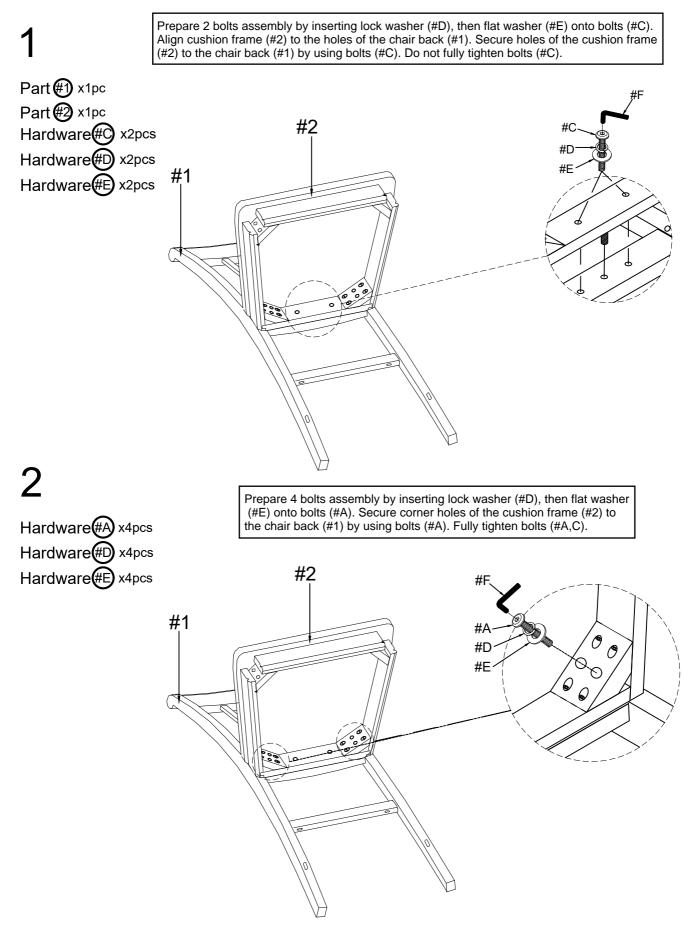

## ASSEMBLY INSTRUCTIONS

