 


**Furniture of America**<sup>®</sup>

# Assembly Instructions

For more information contact our team: [service.ec@foagroup.com](mailto:service.ec@foagroup.com)

## CM4085C

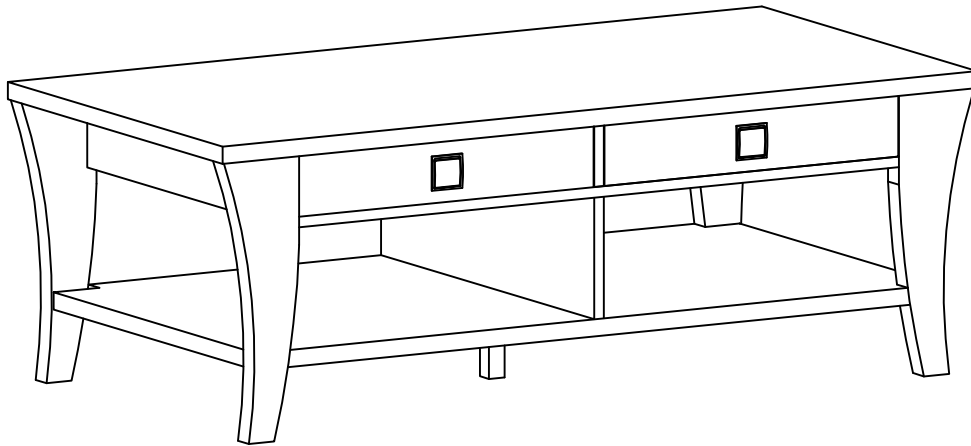

 
### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY  DIFFICULT

Tools Required For Assembly:

Phillips Screwdriver



(Not Included)

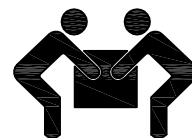 


2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

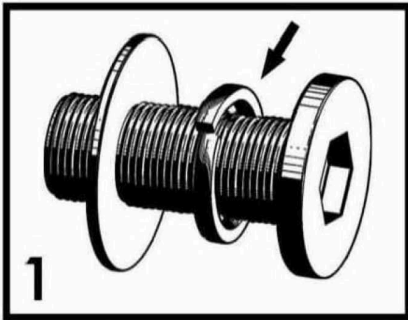


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

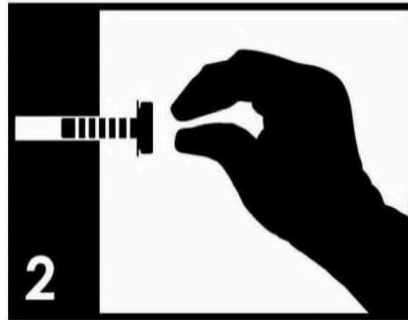


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

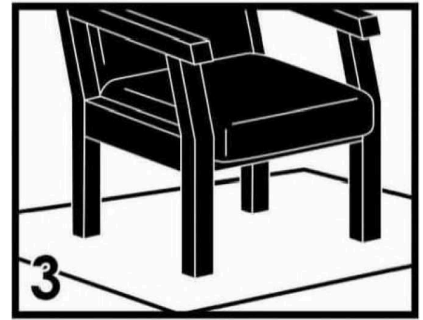


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

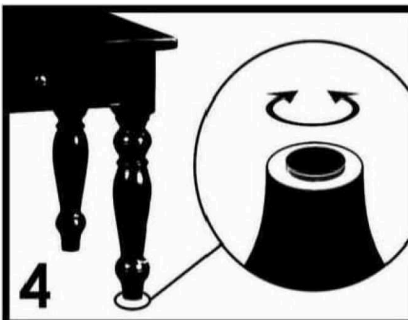

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

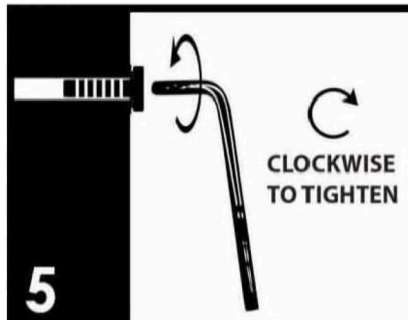


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

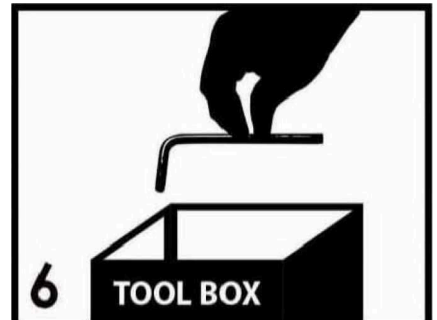

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

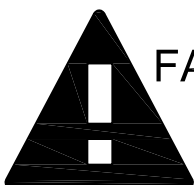


**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

## Cam Lock Fastener Assembly


Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).



 Cam Lock




Cam Pin

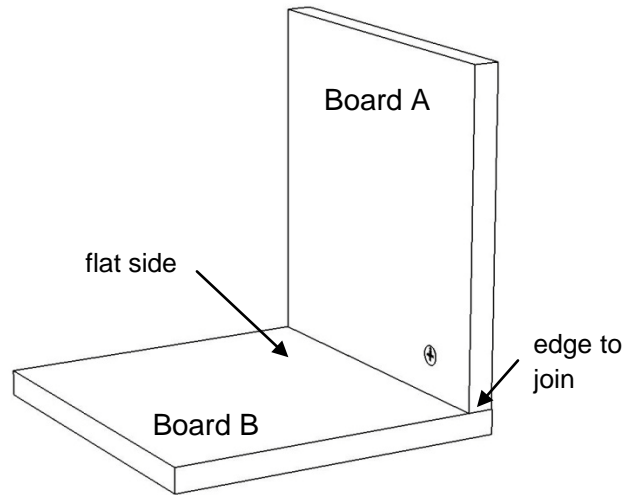 


### To use Cam Lock Fasteners:

 
**Step 1** - Insert Cam Pin into the flat side of a board. Tighten only until snug. Do not over-tighten.

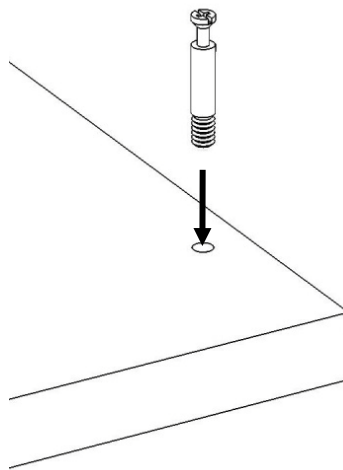

 
**Step 2** - Fit the hole in the edge of the joining board over the Cam Pin. The head of the Cam Pin will be visible in the large hole in the side of the joining board, as in Step 3.

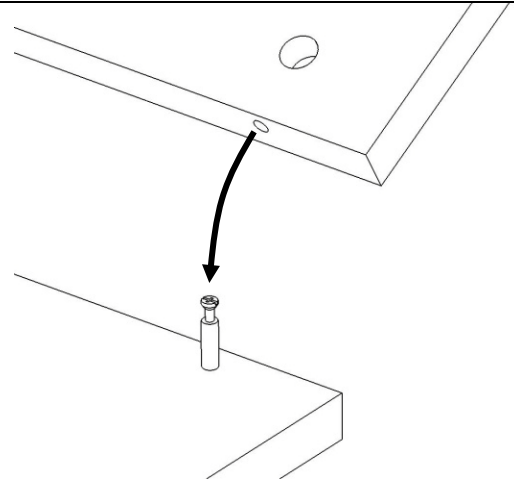


 **Step 3** - Notice the Cam Lock has a "C"-shaped back. An arrow on the front points the same direction as the open section. Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin.

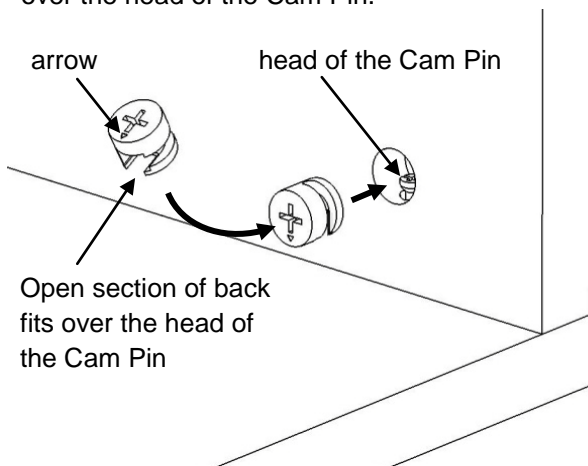

  **Step 4** - Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it locks onto the head of the Cam Pin. Turn only until it is snug – over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

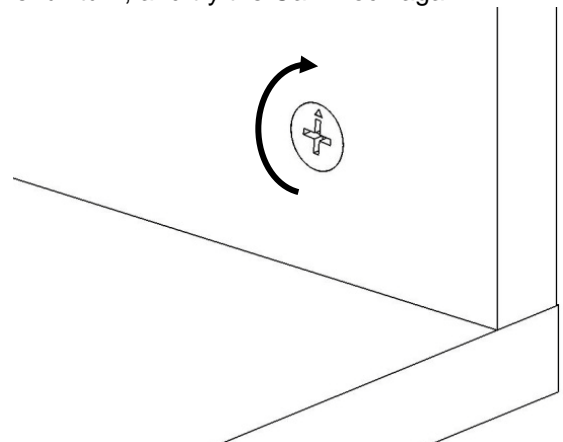

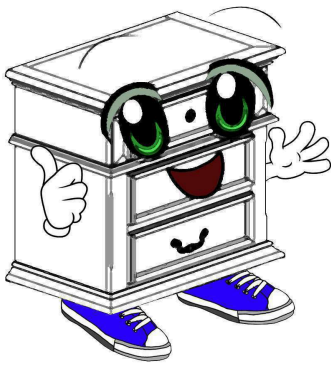


Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

### Parts List

 
### Hardware List




#1 x 1pc  
Table Top

 


#2 x 1pc  
Shelf Frame

 


#3 x 1pc  
Bottom Panel

 

#4 x 1pc  
Divider Panel

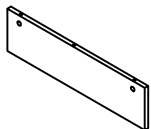 

#5 x 1pc  
Bottom Center Panel

 


#6 x 2pcs  
Side Panel



#7 x 2pcs  
Front Right / Rear Left Leg


 
#8 x 2pcs  
Rear Right / Front Left Leg



#A x 24pcs  
Large Cam Bolt L29



#B x 24pcs  
Large Cam Lock Ø15



#C x 18pcs  
Wood Dowel Ø8x25



#D x 16pcs  
Small Cam Bolt L20



#E x 16pcs  
Small Cam Lock L12



 
#F x 8pcs  
Wood Dowel Ø6x30



#G x 2pcs  
Small Screw Ø4x16




#H x 4pcs  
Large Screw Ø4x40

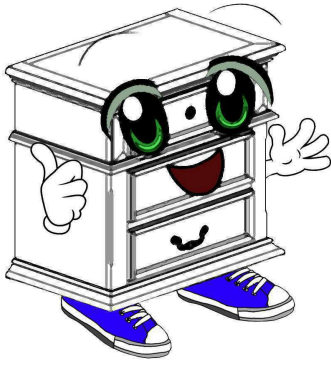

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


### Parts List

 


#9 x 2pcs  
Drawer Front Panel


 
#10 x 4pcs  
Drawer Side Panel



#11 x 2pcs  
Drawer Bottom Panel

 

#12 x 2pcs  
Drawer Bottom Support



#13 x 1pc  
Support Leg

### Hardware List



#I x 4pcs  
Handle 48x48x14



#J x 4pcs  
Handle Screw Ø4x10



#K x 6pcs  
Sticker Ø22

 
 
 


#L x 4pcs  
Foot Tack





#M x 1pc  
Glue

# Exploded View

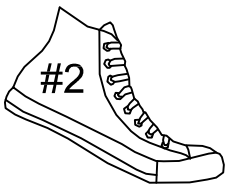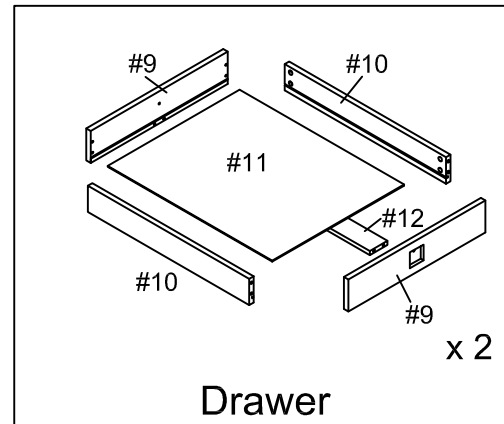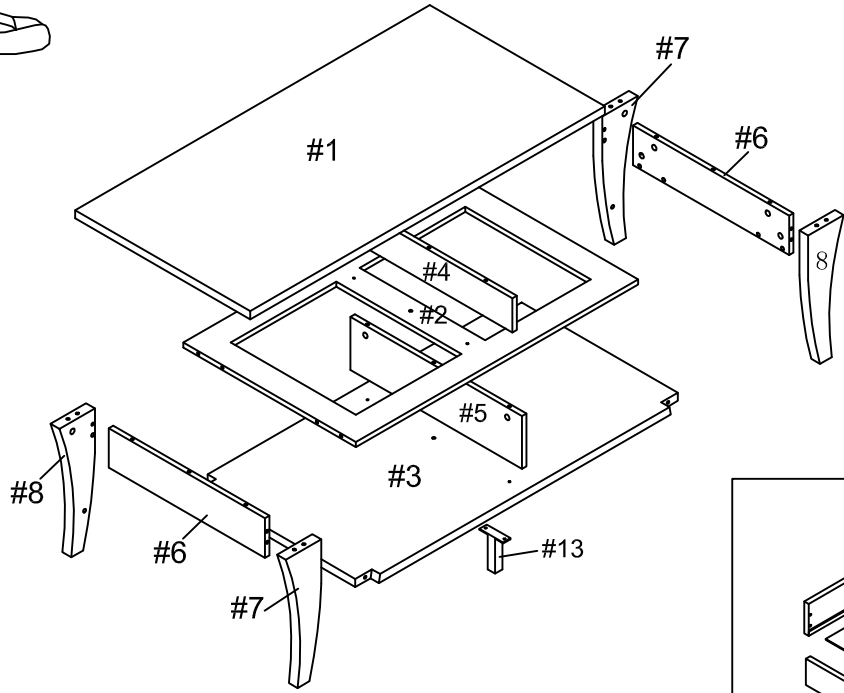

Insert dowel (#C) to the hole of the divider panel (#4). Align the divider panel (#4) to the holes of the shelf frame (#2). Secure by using screws (#H).

#C x 1pc  
#H x 2pcs

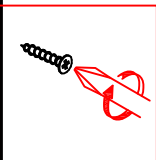 
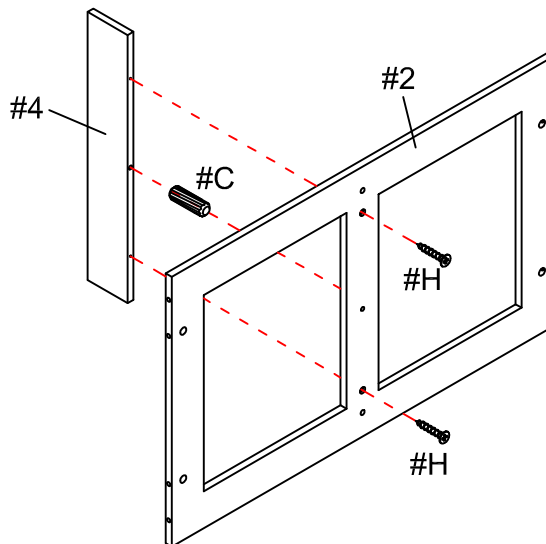 


Tip: Place parts on the flat level surface to ease alignment and assemble.





Attach dowels (#C) and cam bolts (#A) to the holes of the side panels (#6), then align side panels (#6) to the holes of the shelf frame (#2). Secure by using cam locks (#B) onto cam bolts (#A).

#A x 4pcs  
#B x 4pcs  
#C x 4pcs

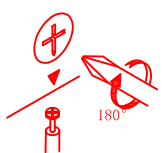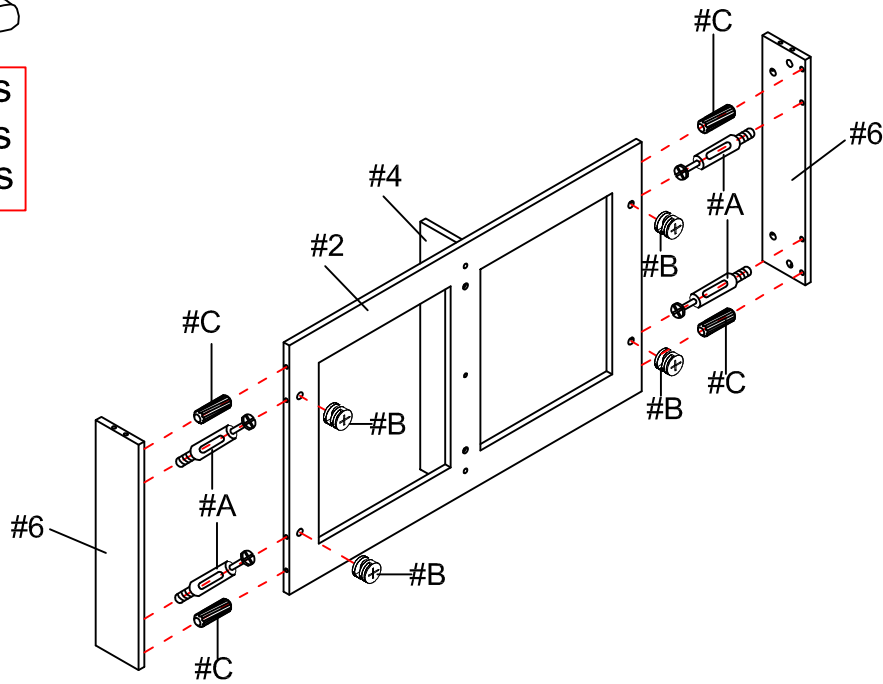  

Attach cam bolts (#A) and dowel (#C) onto shelf frame (#2). Align bottom panel (#5) to the shelf frame (#2), then secure by using cam locks (#B).

#A x 2pcs  
#B x 2pcs  
#C x 1pc  
#K x 2pcs

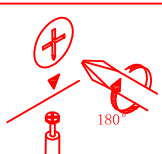 
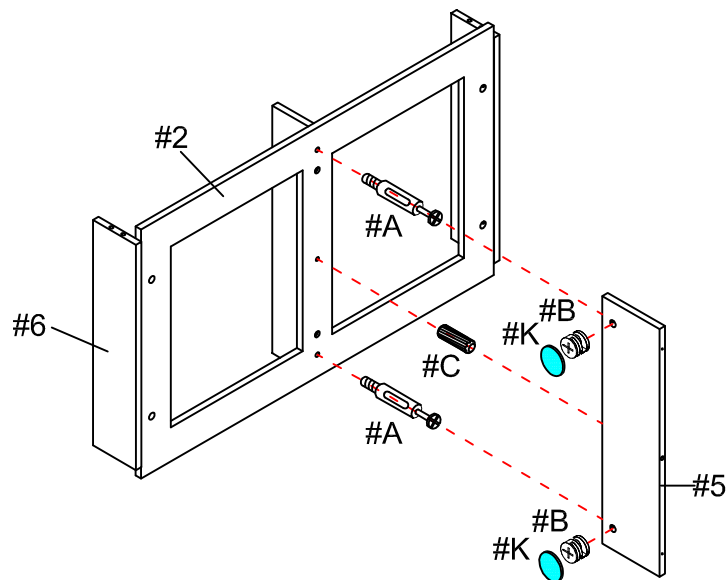 




#5

#C x 1pc  
#H x 2pcs

 
 
Attach dowel (#C) to the hole of the bottom panel (#5).  
Align large bottom panel (#3) to the bottom panel (#5),  
then secure by using screws (#H).

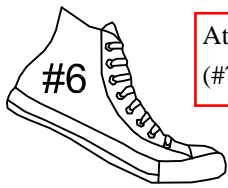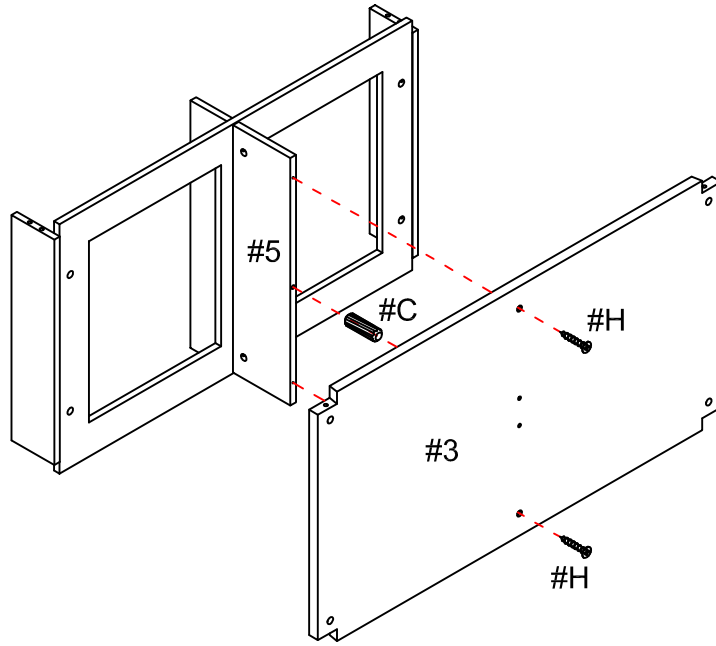

#6

#A x 4pcs  
#B x 4pcs  
#C x 2pcs

  Attach cam bolts (#A) and dowels (#C) to the holes of the legs (#7,8). Align legs  
(#7,8) to the holes of the product, then secure by using cam locks (#B).

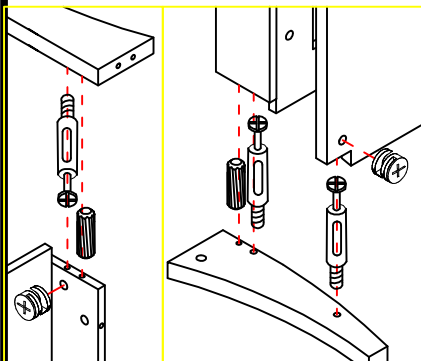
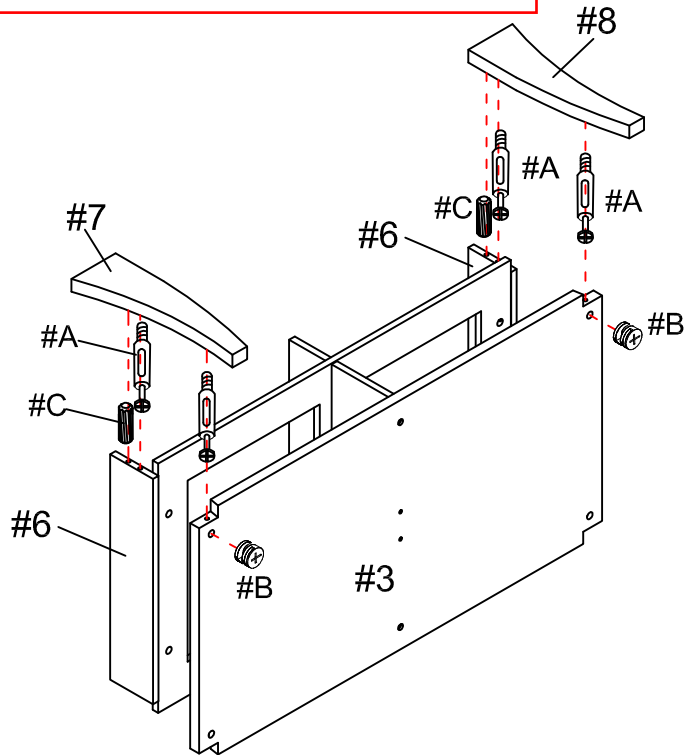







Attach cam bolts (#A) and dowels (#C) to the holes of the legs (#7,8). Align legs (#7,8) to the holes of the product. Secure by using cam locks (#B).

#A x 4pcs  
#B x 4pcs  
#C x 2pcs

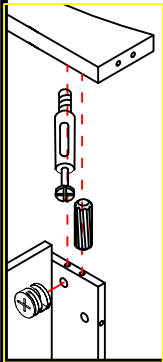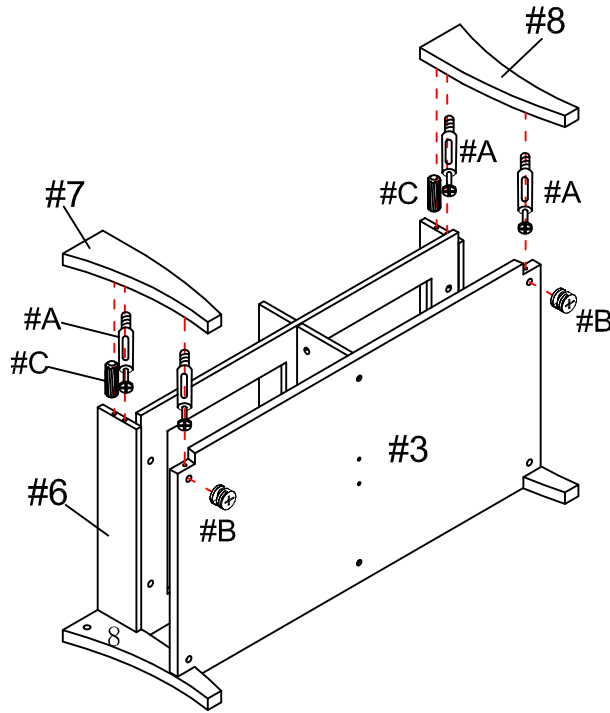  


Flip the product 180 degrees.

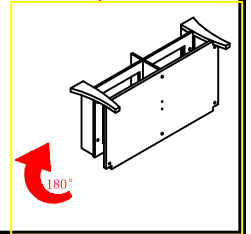 


#G x 2pcs

 Slightly hammer in floor protectors (#L) to the bottom of each legs.

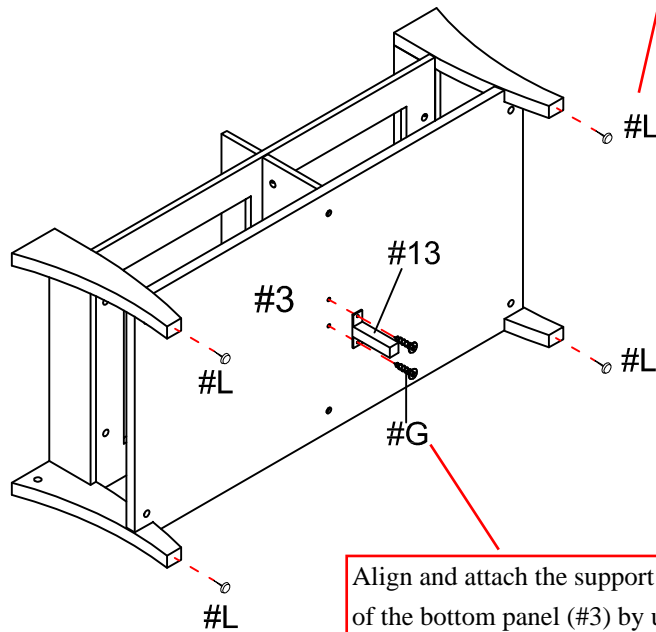


 
Align and attach the support leg (#13) to the holes of the bottom panel (#3) by using screws (#G).

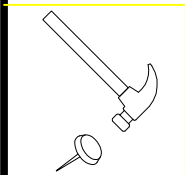





Attach cam bolts (#A) to the holes of the top panel (#1).

#A x 10pcs

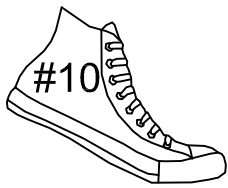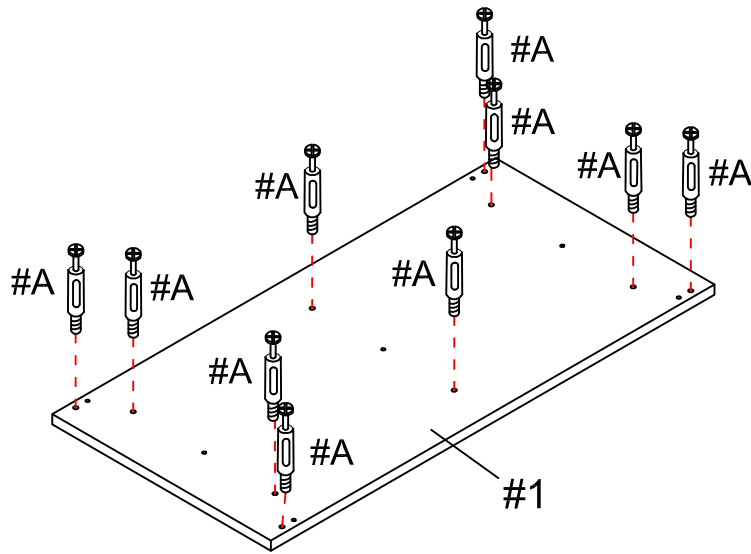  

Attach dowels (#C) to the holes of the top panel (#1). Align top panel (#1) to the holes of the base. Secure by using cam locks (#K), then use stickers (#B) to cover cam locks (#K).


#B x 10pcs  
#C x 7pcs  
#K x 4pcs

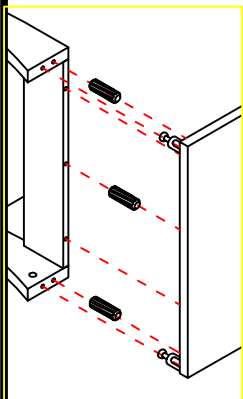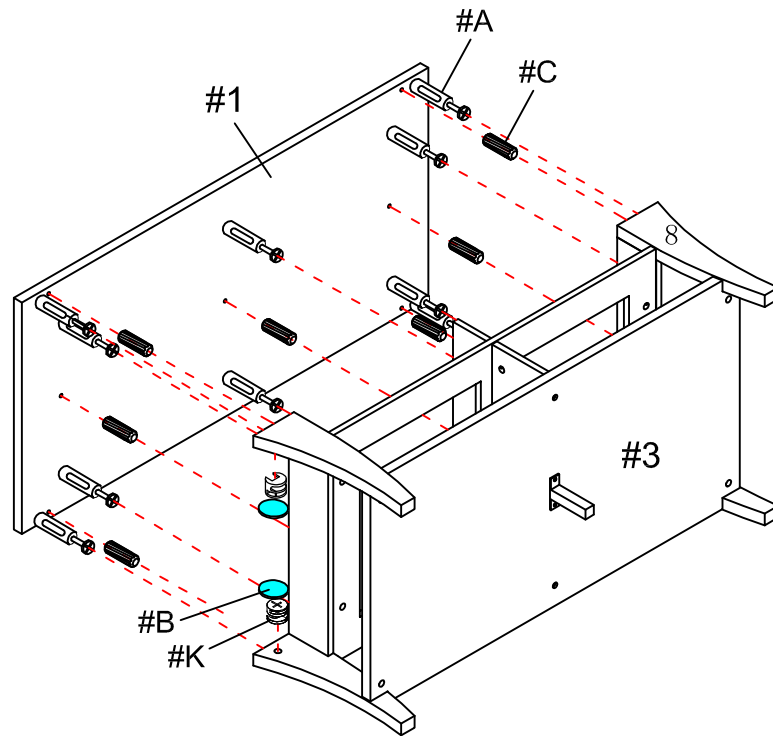  



Align handle (#I) to the front hole of the front drawer panel (#9).  
Secure by using bolts and washers (#J).

#J x 4pcs  
#I x 4pcs

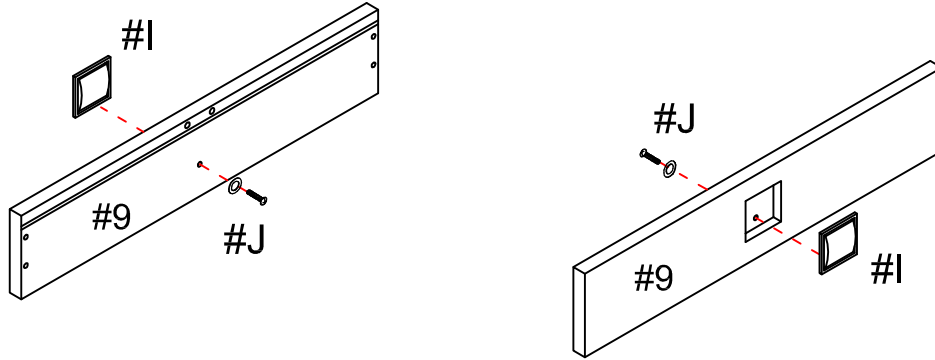 


x 2



Attach cam bolts (#D) to the holes of the front drawer panel (#9). Align front drawer panel (#9) to the holes of the side drawer panels (#10). Secure by using cam locks (#E).


#D x 8pcs  
#E x 8pcs

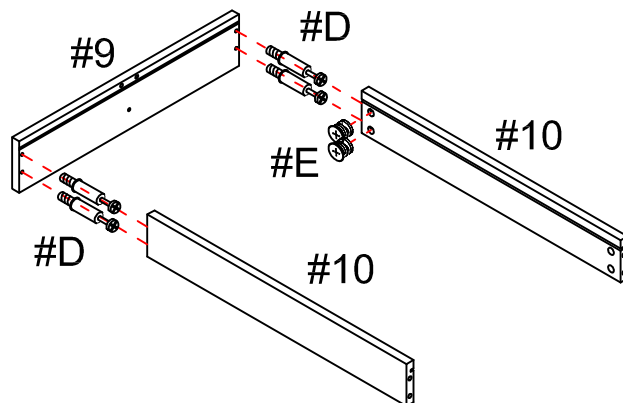 

x 2



 Slide the bottom panel (#11) through the thin lined gaps of the drawer.

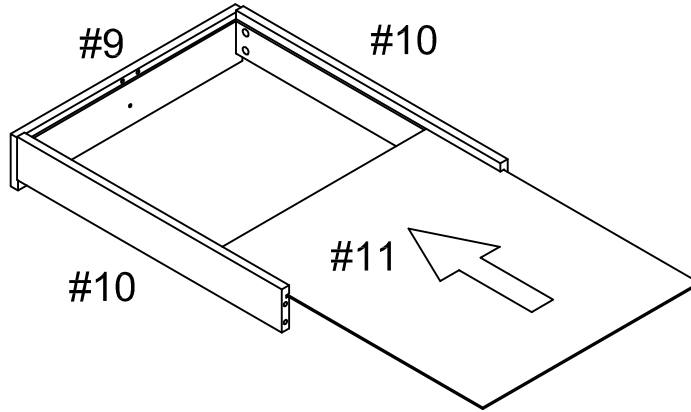


x 2



Insert dowels (#F) to the holes of the drawer bottom support (#12). Attach drawer bottom support (#12) to the holes of the drawer back panel.

#F x 4pcs


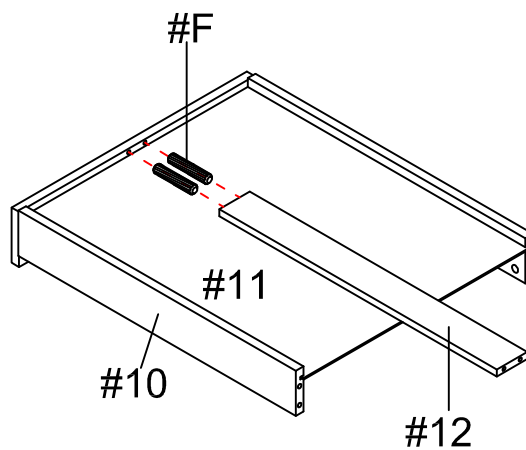 


x 2



Attach cam bolts (#D) and dowels (#F) to the holes of the front drawer panels (#9). Align front drawer panel (#9) to the holes of the drawer, then secure by using cam locks (#E).

#D x 8pcs  
#E x 8pcs  
#F x 4pcs

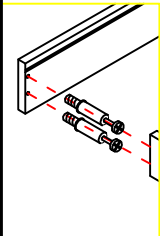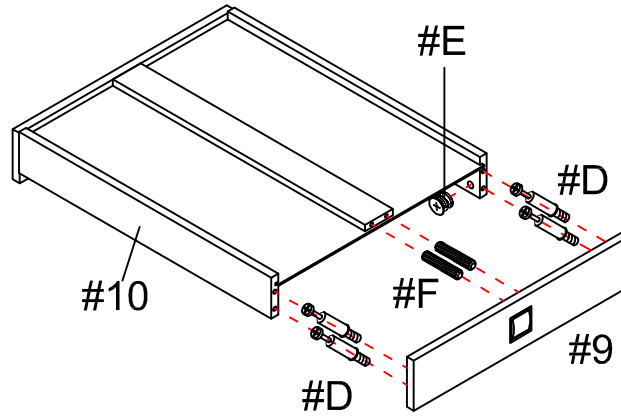  

x 2

ASSEMBLY COMPLETED

