

ASSEMBLY INSTRUCTIONS

MODEL # CM7150D-M

Questions?

GIVE US CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED



(Included)




Phillips Screwdriver



2 - People Recommended



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

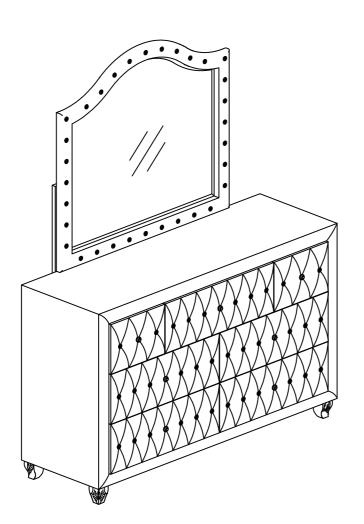






Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

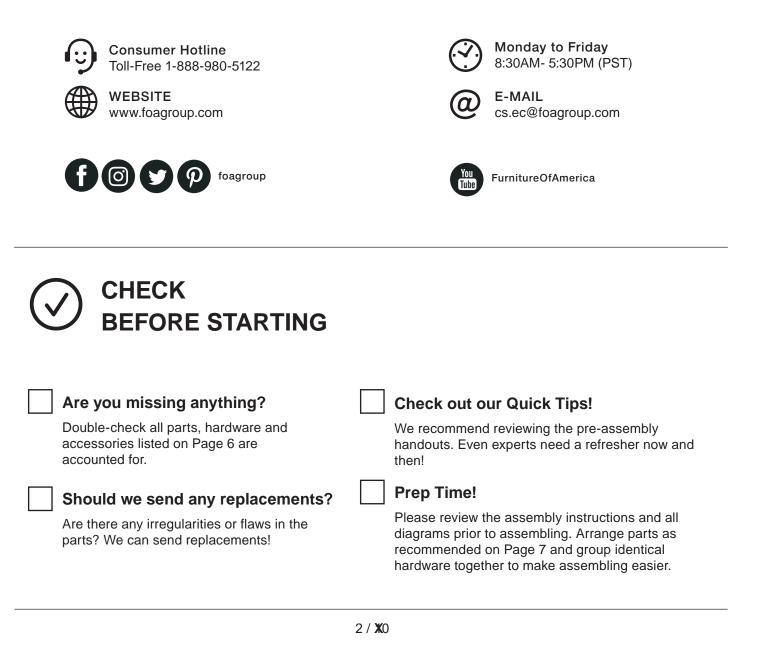

PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



















Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

assembling the product to avoid potential injury and/or damage.

Teamwork

Suitable Location

Assembling near the area of the intended location is highly recommended.

ALWAYS have at least two people to help with transporting and

Sufficient Space

Make sure you have enough space to move around during the assembly.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.


Save the instructions and store

any supplied tools for later


maintenance.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

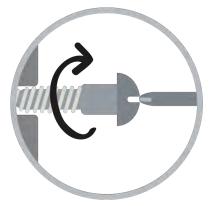


Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

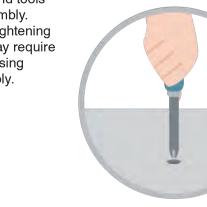

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

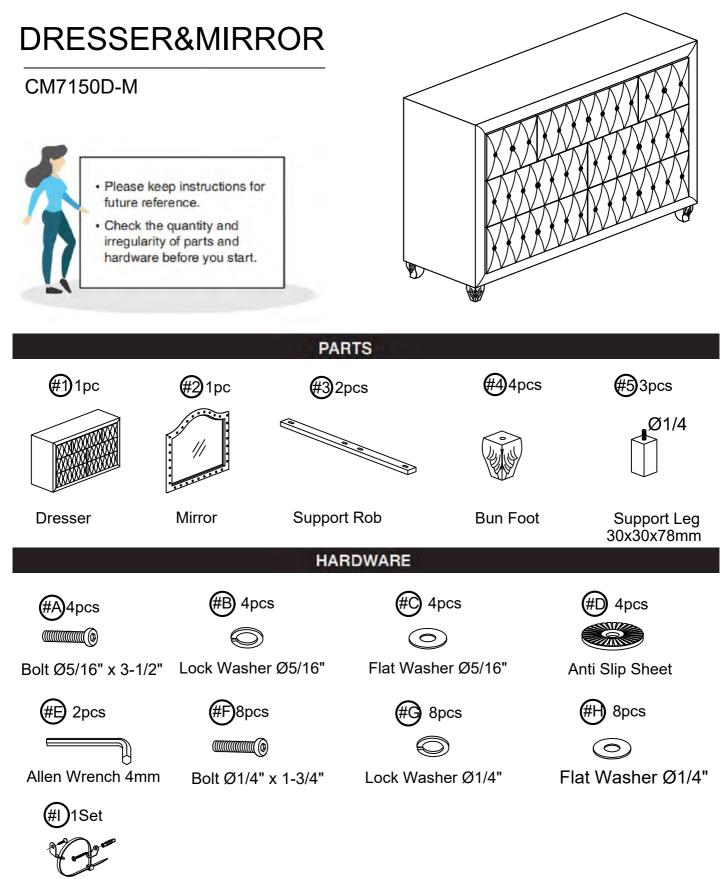


Anti Tip Kit


CM7150D-M is packed in 2 cases


Carton	Disignation	Part		Hardware
CM7150D	Dresser	#1		 #A 4pcs #B 4pcs #C 4pcs
	Bun Foot	#4		#D 4pcs #E 1pc
	Support Leg	#5		#I 1Set
CM7150M	Support Rob	#3	(= = = =)	⊯ #E 1pc
))))))))))))))))))))))))))))))))))))))
	Mirror	#2		🗢 #G 8 pcs
				#H 8pcs

EXPORDED VIEW

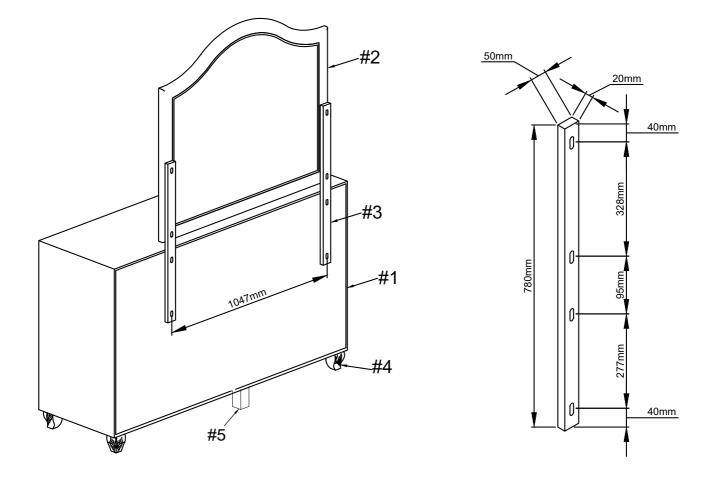


ASSEMBLY INSTRUCTIONS

 

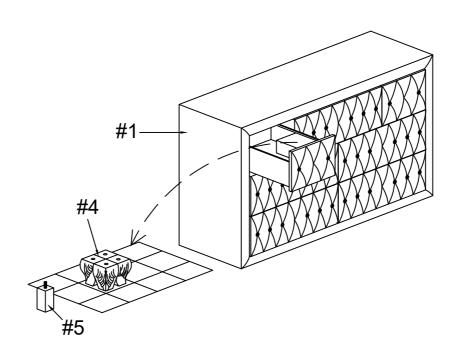


2

Hardware Ax4pcs Hardware Bx4pcs Hardware Cx4pcs Hardware X4pcs Align legs (#4) with washers (#D) to the dresser (#1), then secure by using bolts (#A) with washers (#B,C). Align and attach center leg (#5) to the dresser (#1), then adjust the leveler according to ground level.

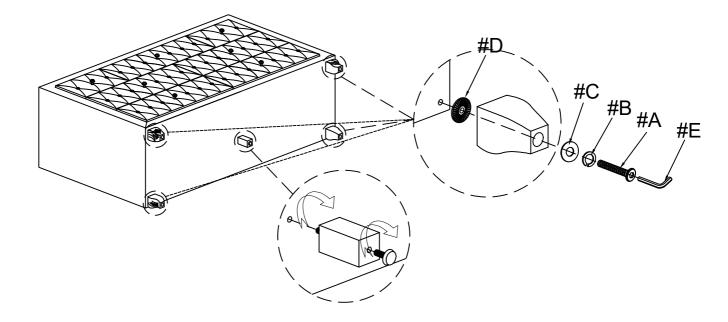

ASSEMBLY INSTRUCTIONS

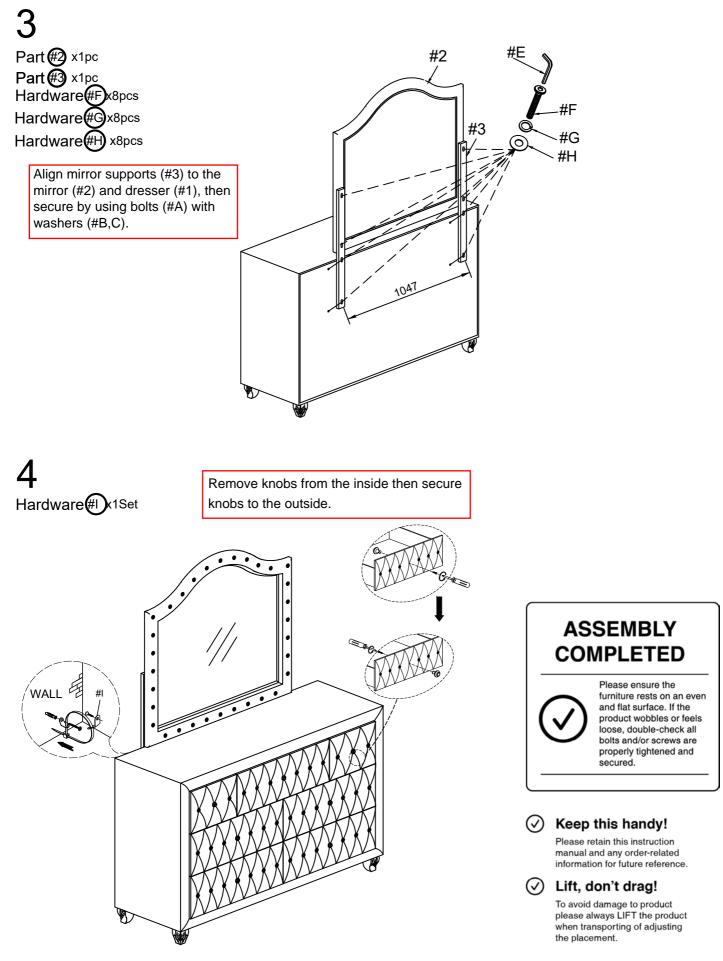


ASSEMBLY INSTRUCTIONS

Wall Mounting and Fixing




EXPANSION WALL ANCHOR

 Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. liability for product damage or failure due to using the incorrect anchors will fall on the installer.



CHECK BEFORE PROCEEDING

Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

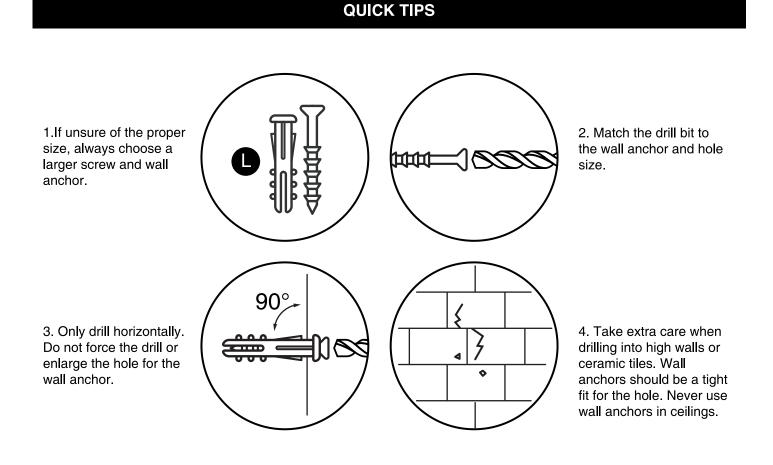





We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.