

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

207104 *Mirror*

REVISION 0 : 11/26/2019 REVISION 1 : 08/25/2023

COASTERFURNITURE.COM





ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR



1PC

C MIRROR SUPPORT (PACKED WITH MIRROR)



2PCS

DRESSER

B FROM BOX ITEM
#207103



1PC

HARDWARE IDENTIFICATION

1 BOLT (M6 x 35mm - BLK)



8PCS

3 FLAT WASHER (1/4"ID x 19mm - BLK)



8PCS

2 LOCK WASHER (1/4" - BLK)



8PCS

4 ALLEN WRENCH (M4 x 60MM - BLK)




1PC



ASSEMBLY INSTRUCTIONS


STEP 1

ARROW MARKING FACE UPWARD

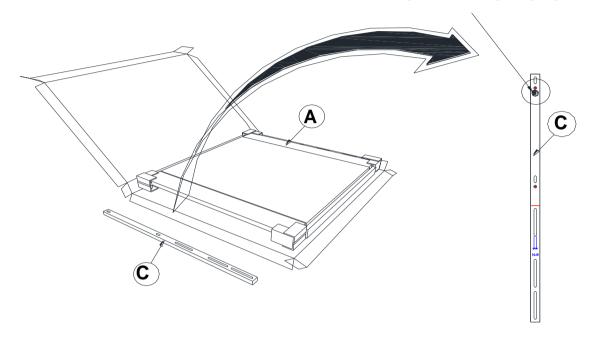

STEP 2

ARROW MARKING FACE UPWARD

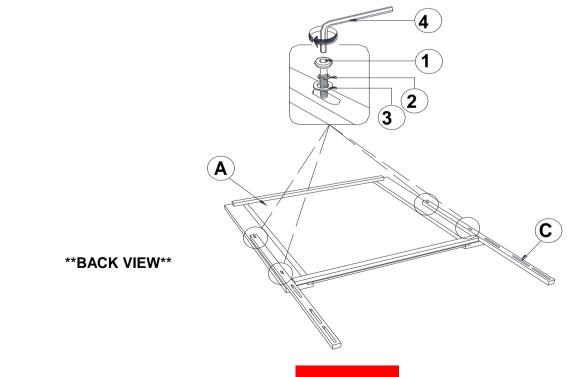


PAGE 3 OF 4

COASTERFURNITURE.COM


COASTER

ASSEMBLY INSTRUCTIONS

STEP 3

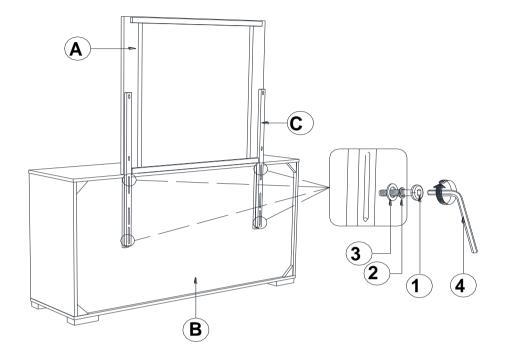


STEP 4 COMPLETE

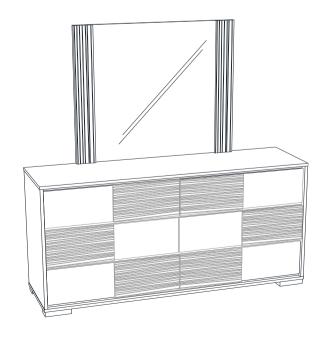





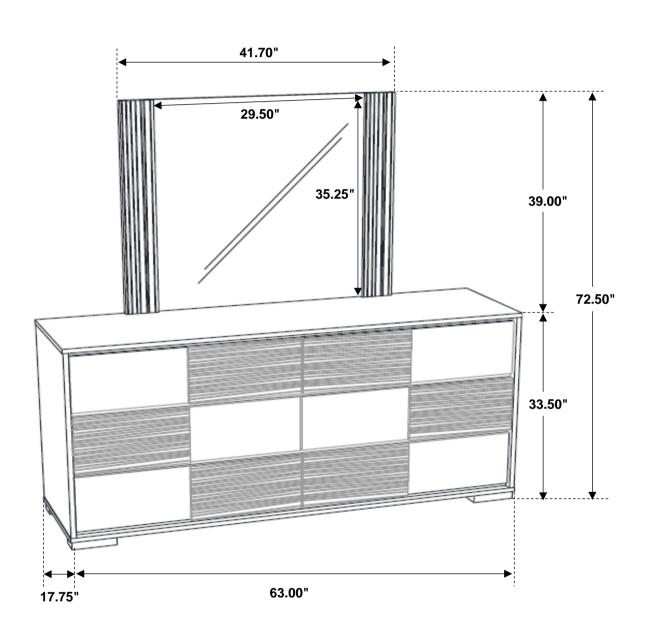

Note: Dimension tolerance ±5%